

Motor Vehicle Mechanics



Removing and Replacing a
Wheel

- 1.) Put the handbrake on or put it in gear
- 2.) Use the tyre iron or breaker bar
- 3.) Lift the car using the jack
- 4.) Use the car manual to see where the jack can be jacked up
- 5.) Make sure the jack is in the middle of the car
- 6.) Place the jack stands under
- 7.) Shake the car
- 8.) Take lug nuts off the wheel
- 9.) Remove the tyre

Arrange the steps to remove the wheel from first to last

Place the jack stands under and remove jack 1. _____

Put the handbrake on or put it in gear 2. _____

Remove the tyre 3. _____

Use the car manual to see where the jack can be jacked up 4. _____

Make sure the jack is in the middle of the car 5. _____

Use the tyre iron or breaker bar 6. _____

Shake the car 7. _____

Take lug nuts off the wheel 8. _____

Lift the car using the jack 9. _____